



FITTING INSTRUCTIONS

BMW F800 GS (30 MM LOWER) (24-26) NTR ADV R1 SHOCK WITH HPA




FITTING INSTRUCTIONS

BMW F800 GS (30 MM LOWER) (24-26)
NITRON ADV R1 SHOCK WITH HPA
NTBKW78_LOW30



INSTALL NOTES:

If your shock has the optional hydraulic preload adjuster, the shock should be mounted so that the hydraulic adjuster knob is accessed from the right hand side of the bike as per the OEM shock.

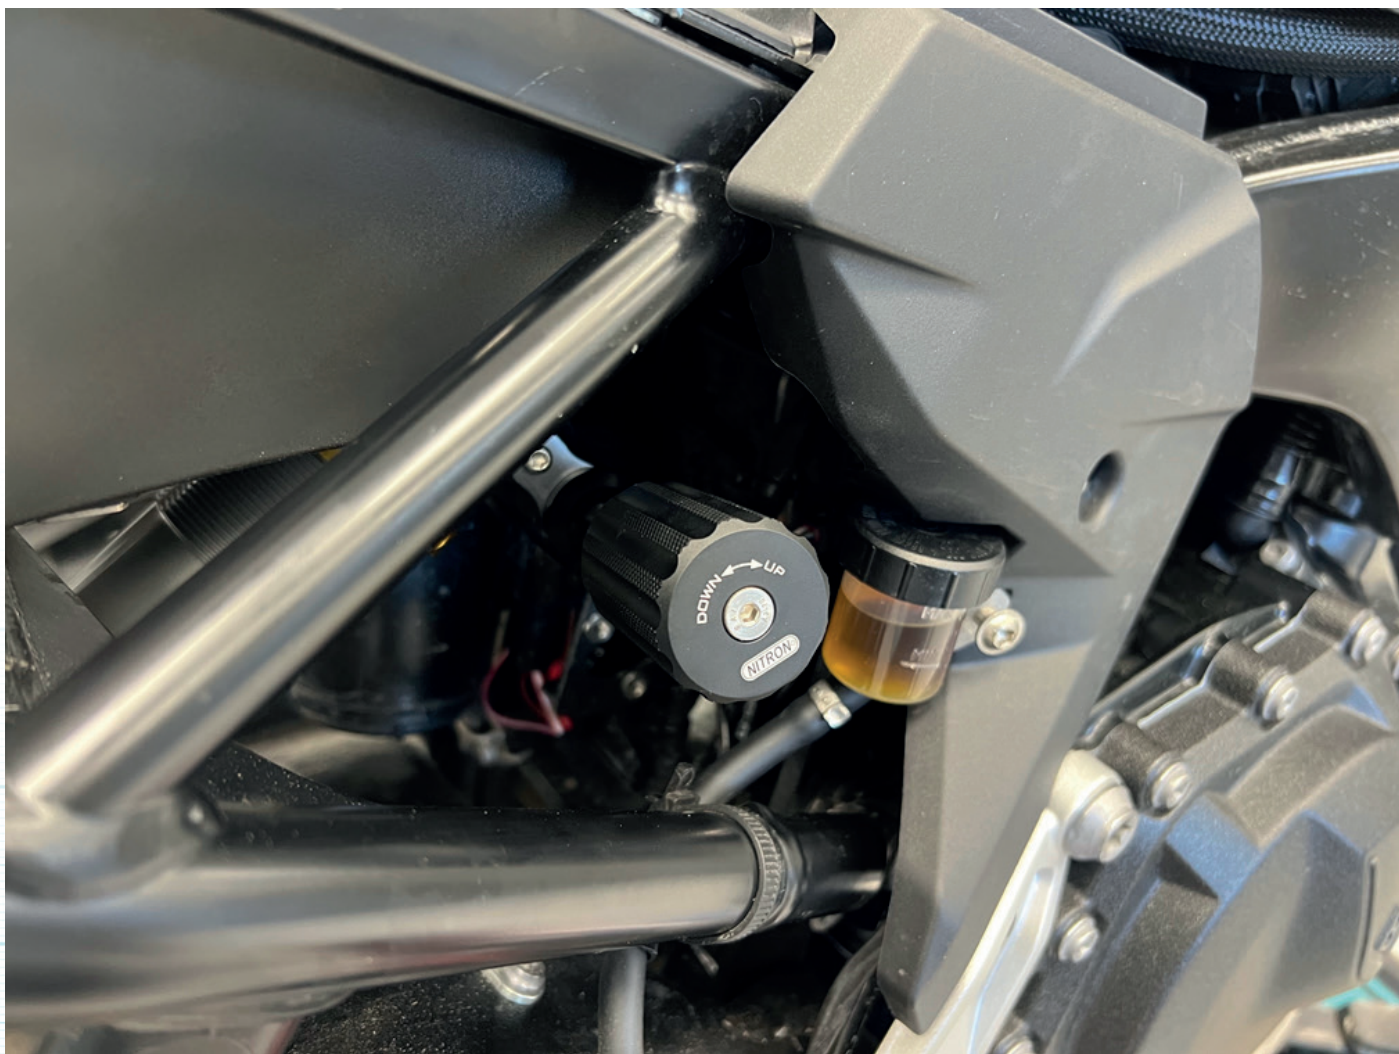

For more information, get in contact
+44 (0)1993 849 449 | +1 (951) 696-1111 | sales@nitron.com