



FITTING INSTRUCTIONS

MV AGUSTA BRUTALE 800 (16-26) NITRON R3 WITH HPA



FITTING INSTRUCTIONS

MAKE: MV AGUSTA BRUTALE 800 (16-26)


PART: NITRON R3 WITH HPA

PART NO: NTBKU05_



INSTALL NOTES:

The hydraulic preload adjuster body should be mounted using the supplied bracket between the footrest hanger and frame using the upper most bolt as shown. Use the three aluminium washers on the back side of the footrest assembly to space it evenly - see the three bolts with red arrows. For the rearmost bolt which screws into the exhaust, replace the OEM bolt with the longer supplied bolt.

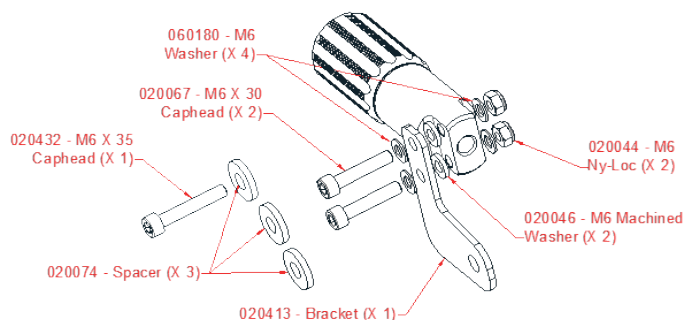

For more information, get in contact
+44 (0)1993 849 449 | +1 (951) 696-1111 | sales@nitron.com